



FPM WIRING WITH EARLY WARNING SYSTEM

NOTE: INSTALL TIMER IN SERIES AND KEEP FPM ON/OFF SWITCH IN THE ON POSITION